

## MIGHTY ATOM Megaprime 75 primer

### RECOMMENDATION FOR USE

#### Charging with Mighty Atoms




1. Insert the detonator into the capwell.



2. To ensure that the detonator cannot be pulled out of the Mighty Atom, the rubber end plug of the detonator must be pushed past the end of the retention lugs.



3. Insert the Mighty Atom's loading guide onto the end of the ANFO hose.

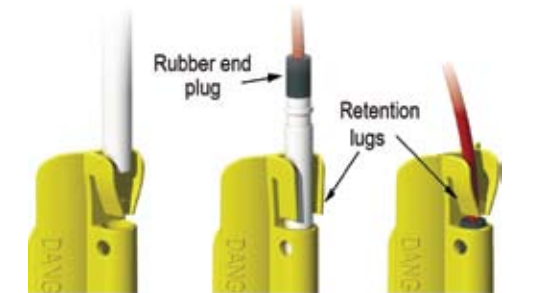

4. Push the ANFO hose and the Mighty Atom down the borehole, ensuring that the primer is at the butt.

5. Charge the borehole as normal with ANFO or emulsion.