

EZICHARGE

RECOMMENDATION FOR USE

1. It is recommended that all lifter holes should be fired with the same number detonator.
2. Boreholes must be cleaned out with air pressure prior to charging (Blown out).



3. Insert the detonator into the capwell that is at the primer end of the coil.



4. Ensure the detonator is fully inserted into the capwell. See Fig 1.



5. Gently pull the detonator signal tube around and press it into the signal tube protection slot that is fitted to the end of the explosives charge.



6. Break open the tape and uncoil the charge.

7. Insert the explosive charge into the borehole. When you get to the point that you cannot push the product any further with your hands, use the ANFO hose or non-ferrous tamping rod to push the tube fully to the toe of the hole. See Fig 2.

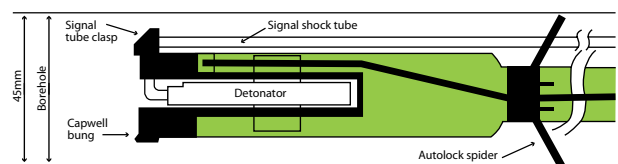


FIGURE 1

8. The EZICHARGE product is not a tamping rod and should not be used to clear borehole rubble or residue.
9. No primer or stemming cartridge is required.

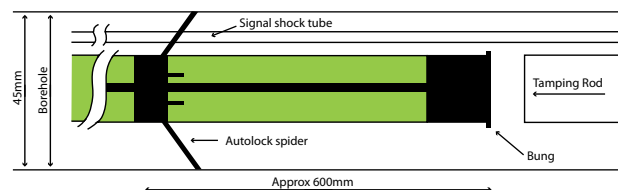


FIGURE 2



JOHNEX EZICHARGE

IMPORTANT

FOR “EASIER” LOADING
BOREHOLES **MUST** BE
BLOWN OUT

THIS REDUCES CHARGING TIME AND ENSURES
CONSISTENT RESULTS – NO LEFT OVER BUTTS
& NO SIGNAL TUBE DAMAGE.